



"Top technology for sound excellence"

# IBIZA LA 212 A

**User manual** 

This manual has been designed to help IBIZA LA 212 A system users from Pro DG Systems to its correctly use and understand its benefits and versatility.

Before using the product, carefully read "Precautions" section of this manual (pages 4 - 5). Please keep this document in a safe place for future reference.

Before flying the system, carefully read "Safety instructions" subsection, located in "Flight hardware" section (pages 34 - 35).

The information included in this document may be changed without prior notice. To stay up to date with the latest version of this document, we recommend that you periodically consult Pro DG Systems website.

When reselling this product, give this document to the new owner. If you supply Pro DG Systems products, please inform your customers about this document.

#### Index

Precautions	
Warranty	5
Declaration of conformity	6
Introduction	
- Description	
- Technical datasheet	
- Architectural specifications	
User guide	
- First steps	11
- Troubleshooting	12 - 13
Components	
- Speakers	14 - 15 - 16
- Compression driver	17 - 19
- Horn	



Amplifier	
DSP - Software ProDGnet	
- Description	
- Usage guide in PC	22 to 31
- Selecting presets in the unit itself	
Flight hardware	
- Safety instructions	
- Components	
- How to fly the system up	
- Stack mode usage	
Ease Focus prediction software	41
Accessories	

# **Precautions**

Please read, keep and follow all safety and use instructions.

Important Safety Instructions.

- 1. Heed all warnings.
- 2. Do not overload the box to avoid damage to the speakers.

3. Do not use this product near water. If the box is used outdoors, make sure that no humidity can enter the box.

4. Clean only with a dry cloth.

5. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

6. Do not install near any heat sources such as radiators, heat registers, stoves or similar (including amplifiers).

7. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wider blade or third prong is provided for your safety. If the provided plug does not fit in your outlet, consult an electrician for replacement of the obsolete outlet.

8. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where it exits from this product.

9. Only use attachments/accessories specified by the manufacturer.



10. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the product. When a cart is used, use caution when moving the cart/product combination to avoid injury from tip-over.

11. Unplug this product during lightning storms or when unused for long periods of time.

12. Refer all servicing to qualified personnel. Servicing is required when the product has been damaged in any way such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.

#### WARNINGS / CAUTIONS:



This symbol on the product means there is uninsulated, dangerous voltage within the product enclosure that may present a risk of electrical shock.



This symbol on the product means there are important operating and maintenance instructions in this guide.



This symbol indicates that the product cannot be treated as ordinary household waste, it must be deposited at the corresponding collection point for electrical and electronic equipment.



This product contains magnetic material. Consult your doctor on whether this might affect your implantable medical device.



Contains small parts which may be a choking hazard. Not suitable for children under age 3.

### Warranty

All the Pro DG Systems products have a 24-month warranty period, which begins from the invoice date of the first purchase.

Consult everything relevant to the warranty conditions at Pro DG Systems website: <u>https://prodgsystems.com/20-vc-warranty.html</u>

Or via email at: info@prodgsystems.com

# **Declaration of conformity**



**Pro DG Systems** declares that the product with reference **IBIZA LA 212 A** complies with the objectives expressed in the following **European Directives**:

- Low voltage 2014/35/UE.
- Electromagnetic compatibility 2014/30/UE.
- RoHS 2011/65/UE. About restrictions on the use of certain dangerous substances in electrical and electronic equipment.
- RAEE / WEEE 2012/19/UE. About waste electrical and electronic equipment.
- General Product Safety 2023/988/UE.







And it complies with the following European Harmonized Standards:

- EN 60065:2014. Audio, video and analog electronic devices.
- EN 55032:2012. Electromagnetic compatibility of multimedia equipment. Part 1: emission requirements.
- EN 55103-2:2009. Electromagnetic compatibility. Part 2 Immunity.

This declaration is available for request by email: info@prodgsystems.com


Or to be downloaded from the website: <u>www.prodgsystems.com</u>

# **Description**

**IBIZA LA 212 A** is one of the Line Array systems from the new **IBIZA Series**.

The new IBIZA Series represents the natural evolution of the previous and prestigious GT and GTA series from **Pro DG Systems**, now with a completely modernized appearance, with much more power and less weight thanks to the incorporation of new state-of-the-art Beyma neodymium components.

**Designed and manufactured in Spain**, the new IBIZA LA 212 A is the most powerful self-powered twoway Line Array system in its range on the market.

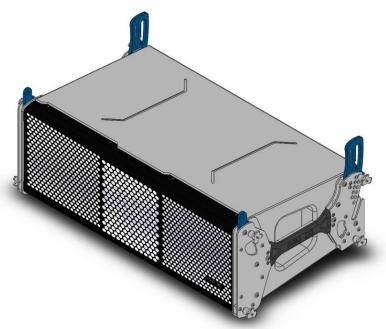

Equipped with two 12" Beyma speakers in a tuned enclosure, responsible for reproducing LF and MF. The HF section features one 1/4" Beyma compression driver coupled to a waveguide.

The transducer configuration generates a symmetrical and horizontal dispersion of 90<sup>o</sup> without secondary lobes in the frequency range.

IBIZA LA 212 A has a **new state-of-the-art Class-D amplifier module and own DSP**, very intuitive to use for easy handling and absolute control. The included amplifier has been designed to, in addition to amplifying the unit itself, amplify another passive unit (IBIZA LA 212 P) in slave mode, thanks to the incorporation of one channel with 2500 W RMS for LF + one channel with 1500 W RMS for MF + 1 channel with 500 W RMS for HF.


It incorporates a switching power supply and a limiter system to guarantee the protection of both the amplifier and the other components as well. Includes factory presets.



Remote processing, control and management are carried out through **ProDGnet** software. **ProDGnet** software allows an instantaneous and intuitive view of the status of all systems, as well as absolute control of the different parameters individually (unit by unit).

#### Ease Focus prediction software is available.

At Pro DG Systems we know the importance for professionals of having a flexible, easily configurable system that guarantees maximum sound performance without the cost of external processors or additional wiring.

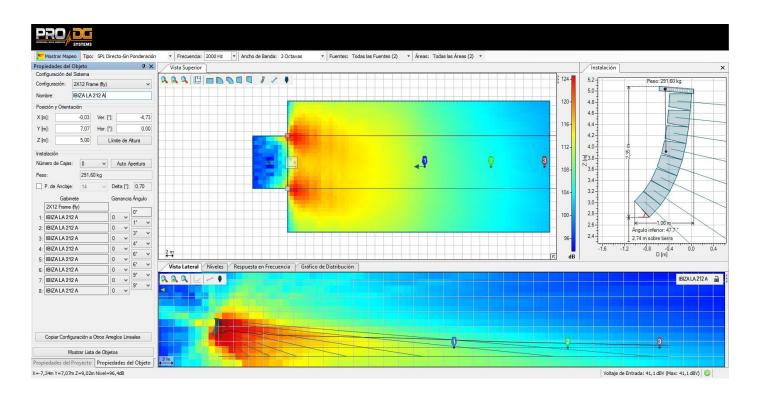

The joint use of *ProDGnet* processing software and Ease Focus prediction software allows you to achieve this objective in seconds, achieving:

- Remote SPL level control.
- Frequency response uniformity for the entire public.
- Digital direction of sound projection in listening areas.

- Reduction of the sound pressure level in areas that should be avoided, such as the stage, walls, or unused balconies.

- Simplification and streamlining of assembly times.

The construction of the IBIZA LA 212 A system is made of birch plywood using CNC machining, with a special polyurea finish resistant to impacts and inclement weather.

Its front part is protected by a robust metal grille and acoustic foam.

The **flight hardware** design of IBIZA LA 212 A system is quick and intuitive to use. The fly bar also allows the use of several units in stack format.

Easy to transport thanks to its compact and ergonomic design, offering a pleasant visual impact too. IBIZA LA 212 A has all the necessary accessories for transport and complete wiring ready to plug in and work.

The perfect solution as main PA at outdoor events or permanent installation. Ideal for working in live concerts, theaters, coverage under amphitheaters, places of worship, corporate applications and all types of events where high performance and versatility are necessary.

IBIZA I	A 212 A
Power handling	1800 W RMS / 3600 W program / 7200 W peak.
Maximum SPL Calculation	1m / 134 dB continuous / 137 dB program / 140 dB peak.
Nominal impedance	8 Ohm.
Frequency range	60 - 20000 Hz.
Dispersion angle	90º horizontal. Vertical dependent on distribution.
LF Component	One Beyma 12" speaker. Neodymium. 1000 W RMS.
MF Component	One Beyma 12" speaker. Neodymium. 700 W RMS.
HF Component	One Beyma 1/4" compression driver. Neodymium. 100 W RMS.
Frequency cut-off for LF*	Without subwoofer: 60 Hz Linkwitz-riley 24 filter - 250 Hz Linkwitz-riley 24 filter. With subwoofer: 90 Hz Linkwitz-riley 24 filter - 250 Hz Linkwitz-riley 24 filter.
Frequency cut-off for MF *	250 Hz Linkwitz-riley 24 filter - 1200 Hz Linkwitz-riley 24 filter.
Frequency cut-off for HF *	1200 Hz Linkwitz-riley 24 filter - 18 kHz Linkwitz-riley 24 filter.
Frequency cut-off for subwoofer *	Up to 90 Hz. Linkwitz-riley 24 filter.
Amplifier	State-of-the-art Class-D. 1 x 2500 W RMS for LF + 1 x 1500 for MF+ 1 x 500 W RMS for HF.
	Surge protection up to 265 V AC, output protection against overload, clip, limiter.
	Input type: balanced. Input impedance: 20000 ohms. Input sensitivity: 6.2 V (+18 dBu).

# **Technical datasheet**

DSP	24 Bit / 96 KHz. 6 factory presets with on- screen selection button.
Pro DG net	1 RS485 input + 1 output link RS485 for network control of the entire system.
Connectors	<ol> <li>x XLR female (input signal), 1x XLR male (output link).</li> <li>x Speakon output for passive unit IBIZA LA 212 P.</li> <li>PowerCON NAC3FCB (current supply).</li> </ol>
Controls	On / off switch and master volume. Preset selector cursor.
Power supply	AC 90~265V - 50 / 60HZ.
Construction	Birch plywood using CNC machining. 2mm thick perforated steel front grille, with oven- dried black electrostatic powder paint finish. Includes acoustic foam.
Paint	Special polyurea finish resistant to impacts and inclement weather. Black color (standard).
Dimensions (height x width x depth)	352 x 966 x 468 mm (13,86 x 38,03 x 18,43 in).
Weight	45,5 Kg (100,31 lbs) net / 48,5 Kg (106,92 lbs) with packaging.

 
\* Disrespect the suggested frequency cuts-off on the different ways may cause components breakage.

 
468 460

 
PR0 00 📢

 $\overline{\mathcal{A}}$ 

# **Architectural specifications**







0

P

[ES] Todas las medidas expresadas en milímetros (mm) [EN] All measures expressed in milimeters (mm)

# User guide. First steps

#### Turning On / Off

Turning on any sound system must be done from back to front. Turn on sources such as CD players first, then the mixer, then the processors, and finally the self-powered loudspeakers. If you have several self-powered loudspeakers, it is advisable to turn them on sequentially one by one.

When turning off the sound system, follow the reverse process, turning off the self-powered loudspeakers before any other element of the system.

Disconnect the device using the mains plug. Both the power connector and the plug must always be accessible and must never be covered or blocked.

To disconnect the power, remove the Powercom type cable from the power connector located on the equipment amplifier, perform this operation on all loudspeakers.

Important: do not unplug the computer when music is playing.

#### Limiter

IBIZA LA 212 A amplifier has a limiter system to protect the equipment.

An excessive level makes the equipment sound bad, causing hearing fatigue, with consequent damage to your health.

#### Equalization

This system does not need additional equalizers. In any case, values higher than +3dB are not recommended.

Remote control and processing are carried out through the *ProDGnet* software (see page 21 for more information).

#### Overheating

The amplifier has a cooling system by incorporating an aluminum heatsink plate and forced ventilation. In case of overheating the amplifier will mute to protect itself. In most cases it will be enough to let the unit cool down for it to work properly again.

You must ensure that the ventilation grilles are free of dust and dirt, as well as preventing their obstruction.

# User guide. Troubleshooting

Problem	Cause	Solution
The unit does not sound.	1. The signal source is not sending a signal over the cable.	<ol> <li>Check the mixer output indicator to see if the signal is being sent.</li> </ol>
	2. Defective cable.	2. Make sure the cables are connected correctly. If so; use another cable.
The unit does not sound at its maximum level.	<ol> <li>The mixer or signal source has insufficient output.</li> <li>Possible overheating of the unit.</li> </ol>	<ol> <li>If you use a mixer, be sure to use balanced output if it has one. Use a mixer or signal source with a higher output level.</li> </ol>
	onit.	2. Lower the master level of the table.
Distorted sound signal.	The mixer or other signal is distorting.	Lower the overall mixer output level or channel gain. Check that the signal source is ok.
Distorted and very loud sound signal.	The system is being overloaded with too much input signal and has reached maximum power.	Lower the mixer output level.
Noise when the unit is connected to a mixer.	1. Probably the output has unbalanced output. Poorly constructed unbalanced to balanced cables are being used.	<ol> <li>Check output and replace wiring.</li> <li>Plug the mixer and powered box into the same outlet.</li> </ol>
	2. The connections to the electrical network are not correct.	<ol> <li>Use a signal cable as short as possible and avoid it being too close to the AC</li> </ol>
	3. The signal cable is too long or too close to the AC line.	power cable.

Noise or buzz when light controls are used in the same environment.	<ol> <li>The sound system is connected to the same phase than the lights.</li> <li>The sound cables are too close to the light cables.</li> </ol>	<ol> <li>Connect the sound system and lighting system to different phases. Request the help of an electrician.</li> <li>Aleje los cables de audio de los cables de luces.</li> </ol>
The system does not turn on even though the power cable is correctly connected, both to the network and to the box.	<ol> <li>Defective cable.</li> <li>Internal fuse blown.</li> </ol>	<ol> <li>Check the cables, connectors and power outlet with a tester or multimeter.</li> <li>Contact your Pro DG Systems distributor or authorized professional to perform the repair.</li> </ol>




If you have any technical problem or questions about Pro DG Systems products; contact our technical support department at: <a href="mailto:sat@prodgsystems.com">sat@prodgsystems.com</a>

# **Speakers**

IBIZA LA 212 A has two 12" Beyma speakers with neodymium magnet, one of them in charge of reproducing low frequencies and another one for medium frequencies.


Speaker for LF - main characteristics
Power handling of 1000 W RMS / 2000 W program
Forced air convection circuit
Optimized neodymium magnetic circuit
4" DUO technology moving coil
Weather resistant cone with treatment on both sides
5,4 Kg weight (per unit)
Optimized for great bass performance



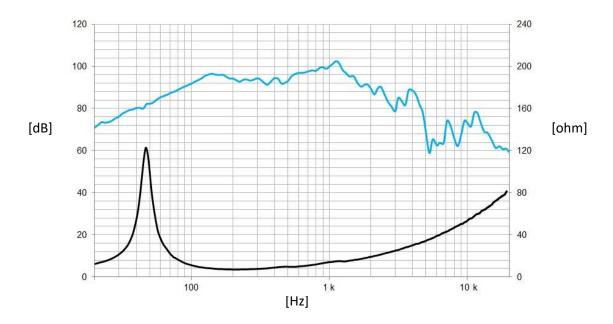

Frequency response measured with a speaker placed on an infinite baffle in an anechoic chamber, 1 W @ 1 m.

#### Speaker for LF - architectural

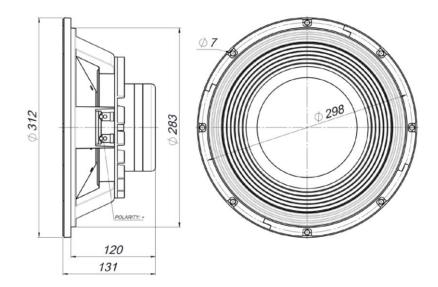

#### Speaker for MF - main characteristics

Power handling of 700 W RMS / 1400 W program

Exclusive cooling system with Malt Cross technology \*

Optimized neodymium magnetic circuit

3" DUO Double Layer Input / Output Copper Voice Coil

Aluminum demodulator ring

Weather resistant cone with treatment on both sides

3,7 Kg weight (per unit)


Optimized to deliver great LF and MF range performance





\* **Malt Cross** technology allows the speaker to handle higher powers with a given coil diameter, reducing weight and increasing sensitivity, while maintaining a total output SPL equivalent to a bigger and heavier speaker.


Malt Cross technology is an internal forced convection circuit that allows the working temperature of the voice coil to be reduced and, likewise, acts as a demodulator ring, linearizing the inductance of the transducer

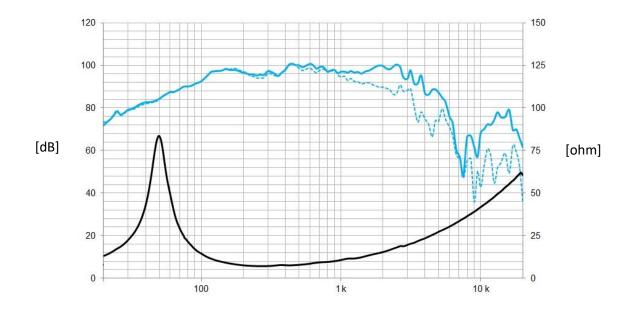

Frequency response measured with a speaker placed on an infinite baffle in an anechoic chamber, 1 W @ 1 m.

----- Frequency response 45<sup>o</sup> off-axis.

#### Speaker for MF - architectural

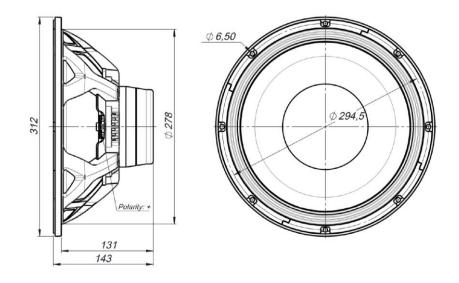

<sup>-</sup> On-axis frequency response.

# **Compression driver**

The HF section of the IBIZA LA 212 A has one 1/4" Beyma compression driver with neodymium magnet, in charge of reproducing high frequencies.



#### Main characteristics

Power handling of 100 W RMS / 200 W program above 1.2 kHz

Deplocex technology for improved thermal dissipation, low power compression losses and high power handling

2.5" (63,5mm) Copper Clad Aluminum Coil with Nomex Former

Exclusive titanium dome design, optimized for linear and extended response with minimized resonances

Patented metal alloy phase connector design with optimized geometry and improved assembly design


High quality optimized neodymium magnetic circuit

1,8 Kg weight (per unit)


Aluminum cover



The sophisticated titanium diaphragm features a mathematically optimized geometric pattern that improves system linearity and efficiency while eliminating unwanted resonances.

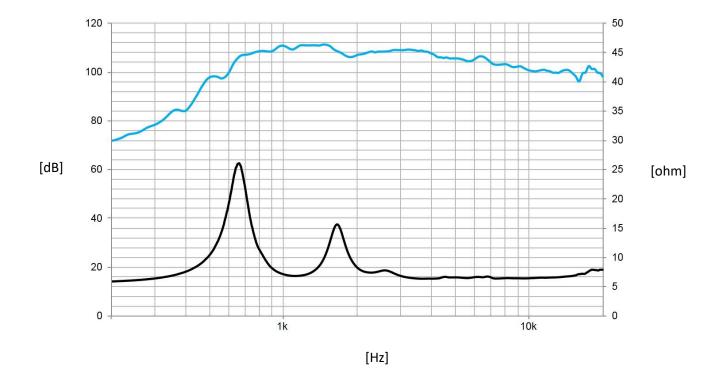

Frequency response measured on axis coupled to the IBIZA LA 212 A horn in an anechoic chamber, 1 W @ 1 m.

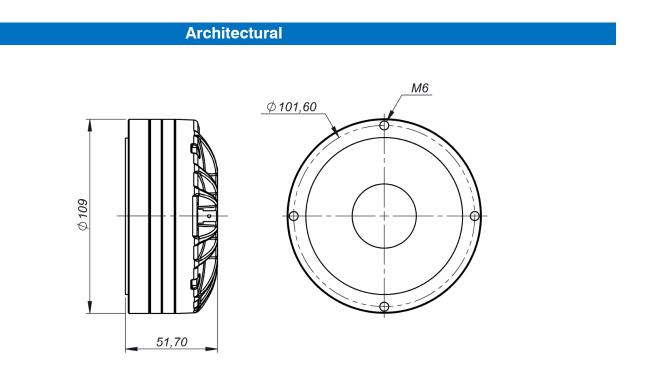

# Horn

The compression driver of the IBIZA LA 212 A is coupled to a horn, specifically designed to achieve maximum performance and acoustic quality in high frequencies.



Made of fiberglass (BMC) and polyurethane (PU2). The combination of both materials allows obtaining a horn with great resistance and low weight, also providing a perfect blend between medium and high frequencies.

Measures (height x width x depth): 330 x 195 x 215 mm (12,99 x 7,68 x 8,47 in)

# Amplifier

IBIZA LA 212 A has a new state-of-the-art Class-D amplifier module and own DSP, very intuitive to use for easy handling and absolute control.

The included amplifier has been designed to, in addition to amplifying the unit itself, amplify another passive unit (IBIZA LA 212 P) in slave mode, thanks to the incorporation of one channel with 2500 W RMS for LF + one channel with 1500 W RMS for MF + 1 channel with 500 W RMS for HF.

Input type: balanceada. Input impedance: 20000 ohms.

Input sensitivity: 6.2 V (+18 dBu).

Switching power supply with overvoltage protection up to 265 V AC, output protection against overload and limiter system to guarantee protection of the amplifier as well as other components. Includes factory presets



- 1. On / Off switch.
- 2. Powercom connector for current output (link).
- 3. Powercom connector for current input.
- 4. Led / Clip Limiter for HF Output Signal.
- 5. Led / Clip Limiter for MF Output Signal.
- 6. Led / Clip Limiter for LF Output Signal.
- 7. LCD screen.
- 8. Speakon output for passive unit IBIZA LA 212 P.
- 9. Push button for preset selection.
- 10. Signal input connector.
- **11**. Signal input connector (link).
- 12. Potentiometer for audio output level regulation.
- **13**. Ethernet network input connector (*ProDGnet*).
- 14. Ethernet network output connector (*ProDGnet*).

# DSP. ProDGnet

Remote processing, control and management are carried out through *ProDGnet* software.



**ProDGnet** software allows an instantaneous and intuitive view of the status of all systems, as well as absolute control of the different parameters individually (unit by unit).


To operate with *ProDGnet* software from your PC you will only need:

 Download ProDGnet software at Pro DG Systems website (section "Support" > "Software"): <u>https://prodgsystems.com/19-scrpt-software.html</u>

Easy to download, all the necessary drivers for installation are included.

Important: the software is currently available for any version of Windows (32 and 64 bits).

 Acquire *ProDGnet* interface (optional), to connect the DSP module housed in the amplifier with your PC. To purchase *ProDGnet* interface contact us at: <u>info@prodgsystems.com</u> or consult your authorized Pro DG Systems distributor.

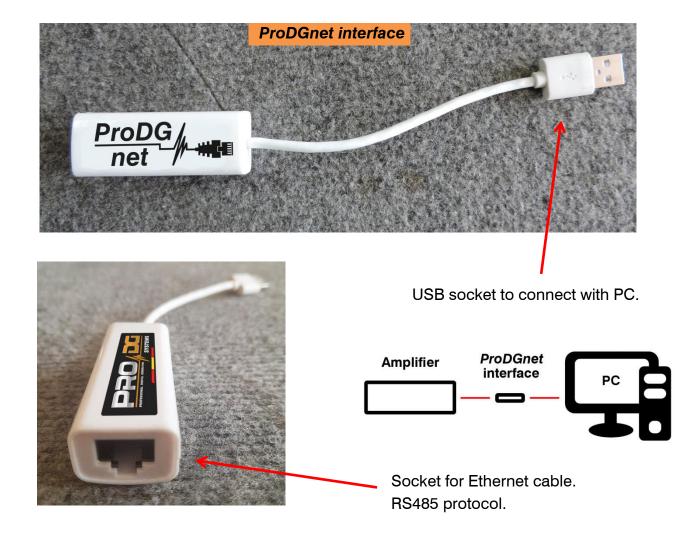

Below is a **guide for use** and information on the different menus of the *ProDGnet software*, which we can see **when we connect the DSP module of the unit to the PC**, through the ProDGnet interface:

IN

OUT

RS485NET

Once the software is downloaded on your PC; create your network of Pro DG Systems systems, to do this connect the Ethernet cabling to the different units;



Loudspeaker Management Sys			- 6 💌
File View Device Memory Co	onnect Tool Help		
a- 🔎 🖬 🗟 📟 🎯 🗙	\$		
	LA 212 A - factory		×
	OVERVIEW		
	Matrix Mixer		
	OUT1 Car OUT2 Car	-13 -13 -20- -43- -43- -43- -43- -60- -0.0d0 Clear Reset	SYSTEMS
	IN A MUTE NG GAIN POLARITY	CAIN POLARITY 0.00m	DELAY UMIT MUTE 0.00mm - 128Bu - 00T 1 1.47mm - 108Bu - 00T 2
Personal Edition Port :	COM8 Baud Rate : 115200 State : Connected	All rights reserved, infringement!	***

This menu allows modifying different options on input A and outputs 1 and 2, such as: Mute, Limiter, Gain, Polarity and Delay.

When clicking "**Connect**" > "**Remote mode**", in the top bar;

Loudspeaker Management Sys	tem V4.4.46					- 🗗 💌
File View Device Memory C	onnect Tool Help					
E Loudspeaker Managemen oys	stem V4.4.46					_ 8 💌
File View Device Memory C						
🔊 🔎 🔒 🖻 🎬 🎯 🕻	Remote Mode Connect					
	Disconnect 12 - facto	ry			×	
	OVERVIEW					
		Matrix Mixer				
		ПА 998 Л2 808	+0 12 1 -15 11 -30 11 -40 11 -0.048 ↓ Clear Reset	<b>DRO</b> ROFESSIONAL DIGITAL GENERATION	SYSTEMS	
		GAIN POLARITY 0.048 +	DELAY 0.00ms	-11,0dB	DELAY LIMIT MUTE 0.00ms1248u OUT 1 1.47ms1048u OUT 2	
Personal Edition Port :	COM8 Baud Rate : 115200 Stat	e : Disconnected	All rights reserved,	infringement!	****	R MANAGEMENT SYSTEM ★★★★★

The following dialog box will appear;

Allowing connection to the DSP module of each unit connected to the Ethernet network.

:OM		
Serial Port:	COM8	
Baud Rate:	115200 bps	

After pressing "OK" all connected units will be displayed (in green) to the left of the menu;


Loudspeaker Management System V4.4.46	
ile View Device Memory Connect Tool Help	
Loudspeaker Management System V4.4.46	
File View Device Connect Memory Status Tool Help	
Device List 🦚 🍷	
IBIZA-LA-212-A	
<1> - IBIZA-LA-212-A	
IBIZALA-212-A	
<2> - IBIZA-LA-212-A	
IBIZALA-212-A O x	
<>- IBIZA-LA-212-A	
IBIZA-LA-212-A	
IBIZA-LA-212-A (I) × <\$> - IBIZA-LA-212-A (I)	
(B)/2A-LA-212-A (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0) × (0	
IBIZALA-212-A	
<7> - IBIZA-LA-212-A	
IBIZA-LA-212-A	
<8> - IBIZA-LA-212-A	
IBIZA-LA-212-A	
<9> - IBIZA-LA-212-A	
IBIZA-LA-212-A	
<10>- IBIZA-LA-212-A	
IBIZA-LA-212-A 🜒 x	
<11>- IBIZA-LA-212-A	
IBIZA-LA-212-A	
<12> - IBIZA-LA-212-A	
Network Edition Port : COM8 Baud Rate : 115200 State : Connected All rights reserved, infringement!	**** Welcome to MA STUDIO *****

By clicking on the **INPUT menu**, a 31-band parametric equalizer is displayed, allowing you to select the type of Filter, Frequency, Bandwidth (Q), Gain and Bypass;

- 🔎 🔒 🖳 🎯 🗙	?															
Device List 🛛 🖷 🌪	<1> IBIZA LA	.212 1 5	actory												×	
BIZA-LA-212-A 🌒 🗙	OVERVIEW	INPUT	)													
<1> - IBIZA-LA-212-A	GAIN							PEQ							NOISE GATE	
BIZA-LA-212-A	+6	+18 Num		eq: 20Hz		4,32 6)	ain: OdB								Thrd: -120dBu 🌲	
42> - IBIZA-LA-212-A		+12													-60	
BIZA-LA-212-A	-15	+6	NA													
<3> - IBIZA-LA-212-A	-30			000	000	000		B (B (G (G	00	0.0	000	00	000		-80	
BIZA-LA-212-A		0dB		000		000		<u></u>			000			<u>a e e</u>	-100	
<4> - IBIZA-LA-212-A	-45 -	-6														
BIZA-LA-212-A	-60	-12													-120 -= =	
<5> - IBIZA-LA-212-A		-18	20H:		50Hz	100Hz	200Hz	500Hz	1kHz		2kHz	5kHz	10kHz	20kHz	45ms 🐥	
			PEQ Co		1 -	EQ Res		EQ Bypass		EQ Vi	ter provote	i i	s Presets		Release: 724ms	
BIZA-LA-212-A 🔹 🔹 🛪 56> - IBIZA-LA-212-A 🌍	Mute 0°	No.		FREQ	Q	GAIN	BYPASS		lo. TYPI		FREQ	Q	GAIN	BYPASS	ByPass	
		1. PEQ.		10000	10.50			-	2. PEQ	1.11						
	DELAY		and the second se	20Hz			Bypass			-	25Hz					
	0,00ms 💌			31Hz 🛟		0,0dB			4. PEQ.	-	40Hz					
BIZA-LA-212-A	Bypass	5. PEQ		50Hz 🛟	4, 32				6. PEQ	-	63Hz					
	CHANNEL	7. PEQ		80Hz 🗘		0,0dB 🛟			B. PEQ	-		4, 32				
	IN A	9. PEQ		125Hz 💲		0,0dB 🗘	Bypass		0. PEQ				0,0dB 🛟			
BIZA-LA-212-A		11. PEQ		200Hz 🛟		0,0dB	Bypass		2. PEQ	-		4, 32				
s9> - IBIZA-LA-212-A		13. PEQ		315Hz 🛟		0,0dB 🛟			4. PEQ	•			0,0dB 🌲			
<9> - IBIZA-LA-212-A BIZA-LA-212-A		15. PEQ	•	500Hz 🗘	4, 32	0,0dB 🛟	Bypass		6. PEQ	-	630Hz	4, 32	0,0dB 🛟	Bypass	~	
49> - IBIZA-LA-212-A																
<b>(9) - IBIZA-LA-212-A</b>	7															
<ul> <li>(9) - IBIZA-LA-212-A</li> <li>BIZA-LA-212-A</li> <li>BIZA-LA-212-A</li> <li>(10) - IBIZA-LA-212-A</li> </ul>		-1,-	_												100	
sp - IBIZA-LA.212-A					_											

On the left of the menu, you can manually modify Gain, Mute, Delay, Bypass and input channel selection.

To the right of the menu is a noise gate where we find Threshold, Attack, Release and a Bypass of the input noise gate.

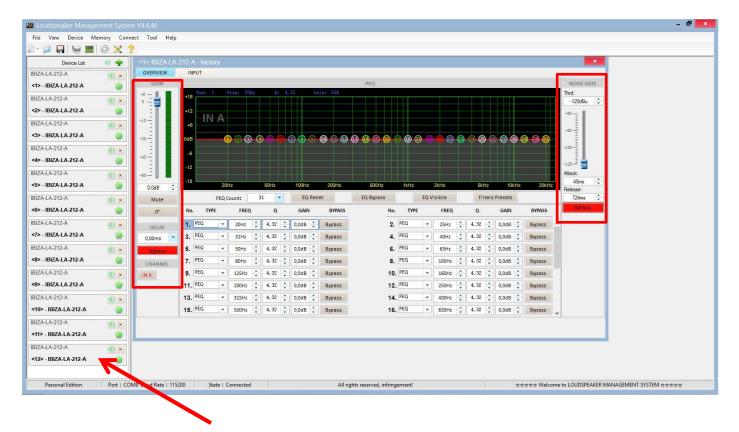

To apply changes to any of the units connected to the *ProDGnet* network, simply click on the desired unit.

To select factory stored presets, it will be necessary to click "Memory" > "Preset manager".

The unit has 6 factory presets.

File	View	Device	Mer	mory	Connect	Tool	Help
🛛 Lou	udspea	ker Man	ager	ment	System V4	1.4.46	
File	View	Device	Mei	mory	Connect	Tool	Help
				Prese	t manager		
			PC p	reset		•	
				Expo	rt all presets		
				Impo	ort presets pa	ckage	1

Then, the factory stored preset selection menu will be displayed;

oudspeaker Management System V4.4.46 • View Device Memory Connect Tool Help		- e - e
		- E
· View Device Memory Connect Tool Help		
Device List (1) 🛉		×
A-LA-212-A OVERVIEW INPUT		
- IBIZA-LA-212-A	evice Preset Manager IBIZA LA-212-A - factory	
A-LA-212-A		
- IBIZA-LA-212-A	Auto Save	
	1:LA212ASTND Device Memory	
INA	2:LA212A-MID 3:LA212A+LOW Boot	
	4:LA212A+MID Current	
	5:LA212A+HIG CurrentAndBoot ON	VOTE
		SYSTE:
- IBIZA-LA-212-A	8: 9: 10:	
A-LA-212-A	10. 11: Boot	
- IBIZA-LA-212-A	12	
(A-LA-212-A ) ×	13. 14:	
	15: 16:	
A-LA-212-A	17: DELAY LI	MITMUTE
		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
	19: 20: - 1.47ms10	ldBu2
2A-LA-212-A	21:	
	22. 23.	
A-LA-212-A	24: 25:	
ALA-212-A	→	
>- IBIZA-LA-212-A		
/A-LA-212-A		
>- IBIZA-LA-212-A		
Personal Edition Port : COM8 Baud Rate : 115200 State : Connected	All rights reserved, infringement!	Velcome to LOUDSPEAKER MANAGEMENT SYSTEM ****

The meaning of the colors shown next to each preset is as follows:

Ι

Empty preset.

Preset stored in memory.

Preset that we want to appear by default when turning on the unit.

Currently selected preset.


Preset currently selected and that will appear by default when turning on the unit.

"Save" allows saving changes made to the selected preset.

"Recall" allows reloading a stored preset.

"**Boot**" allows setting the selected preset as the desired preset that will appear by default when turning on the unit.

To Import or Export presets individually (preset by preset), from PC to amplifier unit or vice versa, it will necessary to click "Memory" > "PC preset".

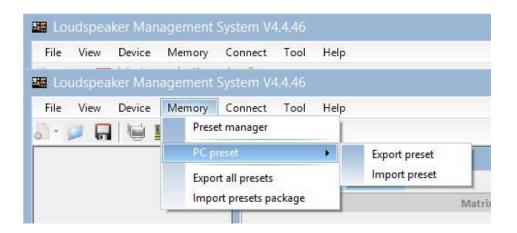

The "Export all presets" tab allows **exporting all the presets stored on the PC to the unit**. The "Import presets package" tab allows **importing all the presets stored on the unit to the PC**.

To change the language, click "Tool" > "Language".

If you want to change the menu color, click "Tools" > "System Color".

	10 p.	1		Tool	Help
dspea	iker Man		System V4	.4.46	
View	Device	Memory	Connect	Tool	Help
			×?	N	Vetwork Edition
			<1>		anguage 🔹 🕨
	View	View Device	View Device Memory	View Device Memory Connect	

By having a network of systems connected to each other through Ethernet cabling and RS485 protocol, you have the possibility of **creating a group of systems**, which allows any change or equalization made to be applied to all the units that are part of the same network.

For example, if we have twelve units IBIZA LA 212 A, when creating a group made up of these units, any change or equalization made will be applied to all units;



	Device Memo	ry Connect	Tool	Help
	er Manageme		4.4.46	
File View	Device Memo	ry Connect	Tool	Help
)- 🔰 🔒	0 📰 🧔	×?	1	letwork Edition
				anguage

To create a system group, click "Tool" > "Network Edition"


Then click on the **magnifying glass** icon;



The	following	dialog	box	will
appe	ear. Click "	<b>OK</b> " but	tton.	

Scan Time	20s	*
ок	Can	cel

Once the previous step has been completed, all the units connected to the network will be displayed on the left of the menu (the group has not been created yet). Then click "**Device List**" button.

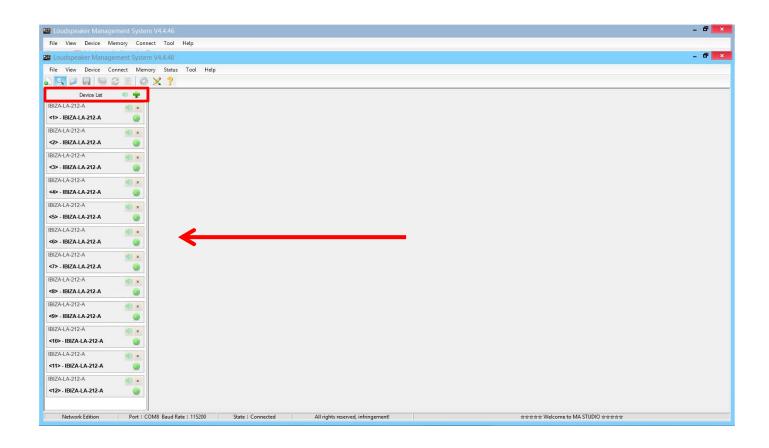

The following dialog box will appear;

<1> IBIZA LA-212-A		
<2> IBIZA LA-212-A		
<3> IBIZA LA-212-A		
<4> IBIZA LA-212-A		
<5> IBIZA LA-212-A		
<6> IBIZA LA-212-A		
<7> IBIZA LA-212-A		
<8> IBIZA LA-212-A		
<9> IBIZA LA-212-A		
<10> IBIZA LA-212-A		
<11> IBIZA LA-212-A		
<12> IBIZA LA-212-A		

Next, we will select all the units that will be part of the group and click on the right arrow icon, the units that are displayed in the box on the right are the ones that will be part of the same group;

NetLink			×
<1> IBIZA LA-212-A	] [		
<2> IBIZA LA-212-A			
<3> IBIZA LA-212-A			
<4> IBIZA LA-212-A			
<5> IBIZA LA-212-A			
<6> IBIZA LA-212-A			
<7> IBIZA LA-212-A	>>> <<		
<8> IBIZA LA-212-A	~~		
<9> IBIZA LA-212-A			
<10> IBIZA LA-212-A			
<11> IBIZA LA-212-A			
<12> IBIZA LA-212-A			
ОК	C	Close	
ОК		Jose	

We will press "**OK**" button, which will cause the following dialog box to appear, in which we can modify the name of the created group, as well as different parameters of it;

📟 Net group s	etting		x
TitleName: MainDevice: Link Mode:	1981 - 1984 -	nc	-
IN	PUT	OUTPUT	
□· ♥ Input	le	□-♥Output ♥ Limiter ♥ Delay ♥ Gain ♥ Phase ♥ HPF ♥ Clip ♥ Clip ♥ LPF ♥ PEQ	
	ОК	Close	

TODO	🜒 🗙
<1> - IBIZA-LA-212-A	
<2> - IBIZA-LA-212-A	
<3> - IBIZA-LA-212-A	0
<4> - IBIZA-LA-212-A	
<5> - IBIZA-LA-212-A	
<6> - IBIZA-LA-212-A	0
<7> - IBIZA-LA-212-A	
<8> - IBIZA-LA-212-A	0
<9> - IBIZA-LA-212-A	
<10> - IBIZA-LA-212-A	
<11> - IBIZA-LA-212-A	۲
<12> - IBIZA-LA-212-A	0

By pressing "**OK**" button in the previous step, the group creation process will be completed. In the menu on the left we can see that all the selected units are already part of the same group.

# DSP. Selecting presets in the unit itself

It is possible to select stored presets in the DSP unit, directly from the IBIZA LA 210 A amplifier. To do this, follow the following steps:

1. Connect the system to the mains and put the switch button in ON position.



2. Once the main menu is displayed on the LCD screen, we will proceed to unlock the unit, to do this, press the preset selection button for a few seconds;



Until the password menu appears;



Important: request the password to Pro DG Systems technical support department via email at: <u>sat@prodgsystems.com</u> or to your authorized Pro DG Systems distributor.

3. Enter the password and turn the preset selector knob clockwise to press "OK" (without holding, just click);



Once this step is completed, the main menu at the beginning will be displayed again. If everything has been done correctly, the "padlock" (screen lock) icon will no longer be displayed in the main menu;



4. After completing step 3; press the preset selection button two times without holding it (just double click), this will cause the preset selection menu to appear;

MENU/ENTER





You

can

has 6 factory presets.

the button. By default, the unit

Ante cualquier problema o duda técnica sobre productos Pro DG Systems; contacte con nuestro departamento de asistencia técnica en: sat@prodgsystems.com

# Flight hardware. Safety instructions



Before flying the system, it is mandatory to take into account the following safety instructions:

- Always carry out a visual and functional inspection of the various components before use. In case of doubt about the correct functioning and safety of the components, they must be removed from use immediately.
- The fly bar for IBIZA LA 212 A (reference: FB LA 212) is designed to support up to a maximum of sixteen units IBIZA LA 212 A. In no case should the aforementioned number of units be exceeded.
- In case of using the system in stacked format on a subwoofer; the maximum number of stackable units allowed will be 6 units. Always secure the array to the subwoofer by using slings.
- The hanging of the units must be carried out by professionals with adequate knowledge of the components and hardware to be used. This process must be carried out by at least two people.
- It is the responsibility of the person or team installing the system to ensure that the suspension / fixing points are suitable for the intended use.
- The application of safety factors of 5:1 for enclosures and static parts is accepted in a standardized manner. For those elements subjected to fatigue due to friction and variations in the stresses to which they are subjected, the following safety factors must be met: 5:1 for steel cable slings, 4:1 for steel chain slings and 7:1 for polyester slings. This means that an element with a breaking stress of 1000 Kg can be subjected to a static working load of 200 Kg (safety factor 5:1) and a dynamic load of only 142 Kg (safety factor 7:1).
- When hanging a system, the working load must be less than the strength of each individual anchor point as well as each enclosure.
- When suspending elements from the ceiling or other structures, extreme caution must be taken by previously calculating their resistance. Sound systems should never be hung on structures that do not guarantee full safety guarantees.
- When hoists are in operation (when lifting the system), ensure that no one is directly under or near the load.
- Under no circumstances scale or hang to the array.



- It will be necessary to fix at different points those systems that are subject to gusts of wind, to avoid their swaying. In no case is it recommended to fly systems that are subject to strong gusts of wind.
- No risk should be accepted in terms of public safety. It is the responsibility of the person or team of people carrying out the assembly to provide themselves with personal safety elements, such as helmet, gloves, safety footwear, etc., to carry out this work. As well as the correct signage of the space in which work is being done.
- All accessories used to fly a Pro DG Systems sound system not provided by Pro DG Systems are the responsibility of the user(s).

In no case will Pro DG Systems be responsible for damages caused by incorrect use of the flying system by the user or users, whether physical damage to people or damage to the product or the attached facilities. As well as for failure to comply with the previously indicated safety instructions.

### Flight hardware. Components

At Pro DG Systems we know the importance for the professional of installing the different systems in a simple, fast and safe way. IBIZA LA 212 A flight system has been designed to guarantee these purposes. The different components are detailed below:




#### Herrajes

Integrated into the box chassis itself.

Include retractable cams, their release and fixation are carried out by extracting / inserting the pins in the different points housed for this purpose.

The rear hardware has different points that allow individual angulation of each box. By default, each box is served placed at the "0" point (zero angle degree).

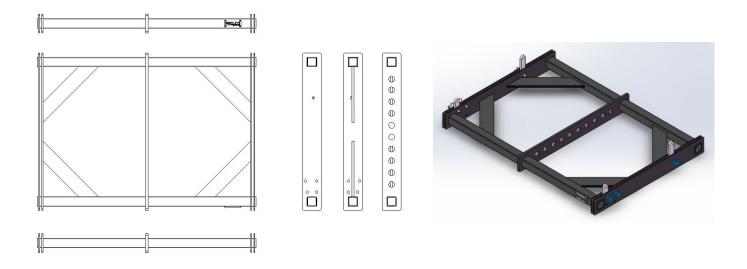

#### FB LA 212

Made of high-strength steel with oven-dried black electrostatic powder paint finish.


It allows the raise up of a maximum of sixteen units IBIZA LA 212 A. It also serves as a fixing base to use the system in stacked format on subwoofers.


Measures (height x width x depth):: 80 x 926 x 665 mm (3,15 x 36,46 x 26,18 in)

Weight: 30 Kg (66,14 lbs)






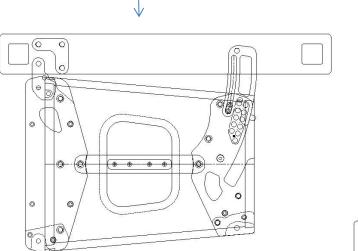

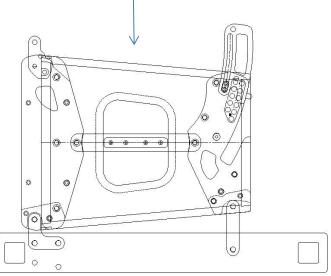



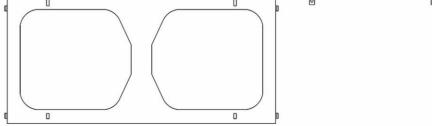


#### FB LA 210 + LA 212

Made of high-strength steel with oven-dried black electrostatic powder paint finish.

Allows the combination of IBIZA LA 210 A and IBIZA LA 212 A Line Array systems. It allows the raise up of a maximum of sixteen units between both systems (example; eight units IBIZA LA 210 A + eight units IBIZA LA 212 A).

Measures (height x width x depth): 50 x 905 x 500 mm (3,15 x 35,63 x 19,69 in).

Weight: 20 Kg (44,09 lbs).

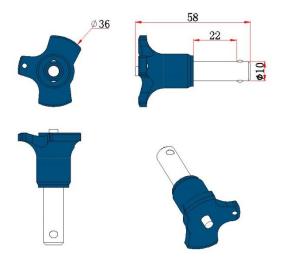

#### Pin locks

They allow the attachment of the box to the different components, as well as the combination between several boxes to form the array.

They have a safety extraction/insertion system through the use of a locking button.

**Note**: the specifications of these components may be changed without prior notice. To be aware of the latest modifications, please consult Pro DG Systems website periodically.

# Cómo volar el sistema

**Important**: before flying the system, carefully read the subsection "Safety instructions", located in the "Flight hardware" section (pages 34 - 35).

1 Remove the locking pins located on the front and rear hardware to release the cams.

 




**2** Pull the cams up and secure them again using the pins. On the rear hardware; set the cam at the desired graduation, the point "0" represents a zero degree of angulation.










0 0

4 Then repeat step 2 for the following boxes fixation.


The design of the cams included in the rear hardware prevents uncontrolled swinging when disassembling the last box of the array assembly.




**Note:** use TR LA 212 transport trolley to facilitate lifting the system from the ground; stacking the boxes on the trolley first and installing the fly bar last.

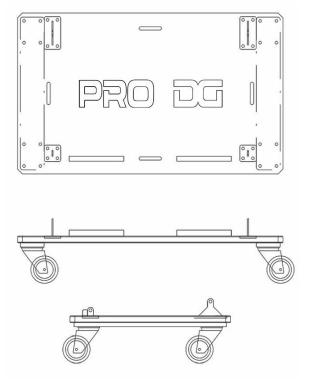

# Stack mode usage

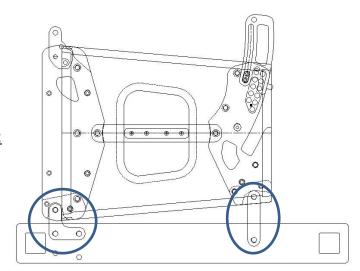

By using the cams built into the fly bar FB LA 212;

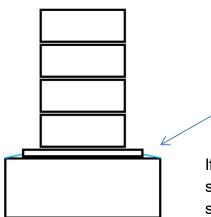


#### Slings

If the array is stacked on a subwoofer, it will be necessary to secure it by using slings. In any case, it is not recommended to stack more than 6 IBIZA LA 212 A units.


By using TR LA 212 transport trolley. Simply placing the stacked box assembly on the skid above the subwoofer (1). Once located; it will be necessary to press the brake pedals of the trolley (2), as well as securing the array to the subwoofer by using slings (3)

In any case, it is not recommended to stack more than 6 IBIZA LA 212 A units.

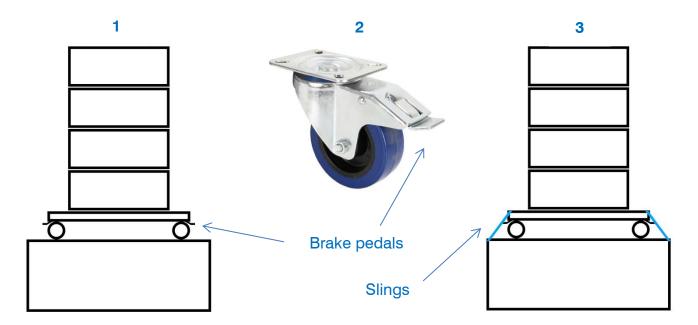

# **Ease Focus prediction software**

At Pro DG Systems we know that manufacturing high-quality speakers is an important part of the job. The guarantee of being able to use the systems properly is the other fundamental part of our work. Good tools make the difference to achieve optimal use of systems

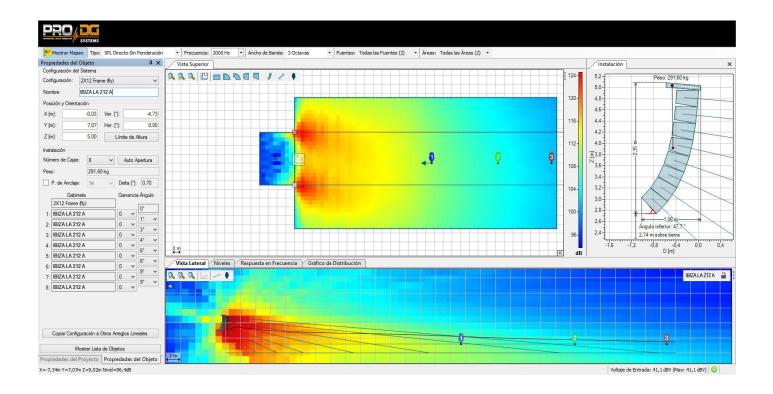

IBIZA LA 212 A has Ease Focus V3 prediction software with which we can simulate the behavior of different systems in different places and circumstances, as well as obtain information on coverage, frequency, SPL and general behavior of the system, in a simple and comfortable way for the user. It is very easy to use and we have training courses for users of Pro DG Systems products. For more information, consult our technical service at: <a href="mailto:sat@prodgsystems.com">sat@prodgsystems.com</a>

Ease Focus prediction software can be downloaded directly at Pro DG Systems website: <u>https://prodgsystems.com/19-scrpt-software.html</u>

You can download the user guide of Ease Focus 3 software here

You will find GLL files to simulate the behavior of IBIZA LA 212 A at: www.prodgsystems.com


### Accessories


#### TR LA 212

Transport trolley for four units IBIZA LA 212 A.

It has a special polyurea finish resistant to impacts and inclement weather.

It has a brake system and slots for fixing it using slings, etc.

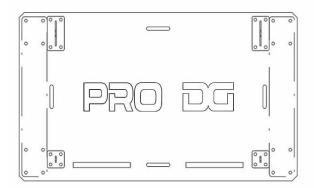

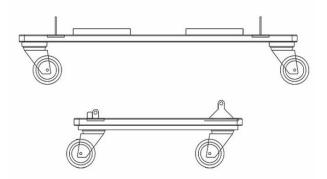



#### CV LA 212

Protection cover for four units IBIZA LA 212 A. Made of waterproof material.

Complete system wiring ready to go.







#### **PRO DG SYSTEMS INTERNATIONAL**

P.I. Santa Bárbara. C/ Aceituneros nº 5. 41580 Casariche (Sevilla), Spain Tel: +34 954 011 095 Cel: +34 678 548 947 export@prodgsystems.com info@prodgsystems.com www.prodgsystems.com

#### **PRO DG SYSTEMS AMERICA**

1225 NW 93rd CT Doral, FL, 33172 Español: (786)-715-4705 English: (786) 314-1856 sales@prodgamerica.com www.prodgamerica.com